


# Organic Scintillation Materials and Assemblies

*It's* | *what's*  
**Inside**  
*that* **Counts<sup>®</sup>**

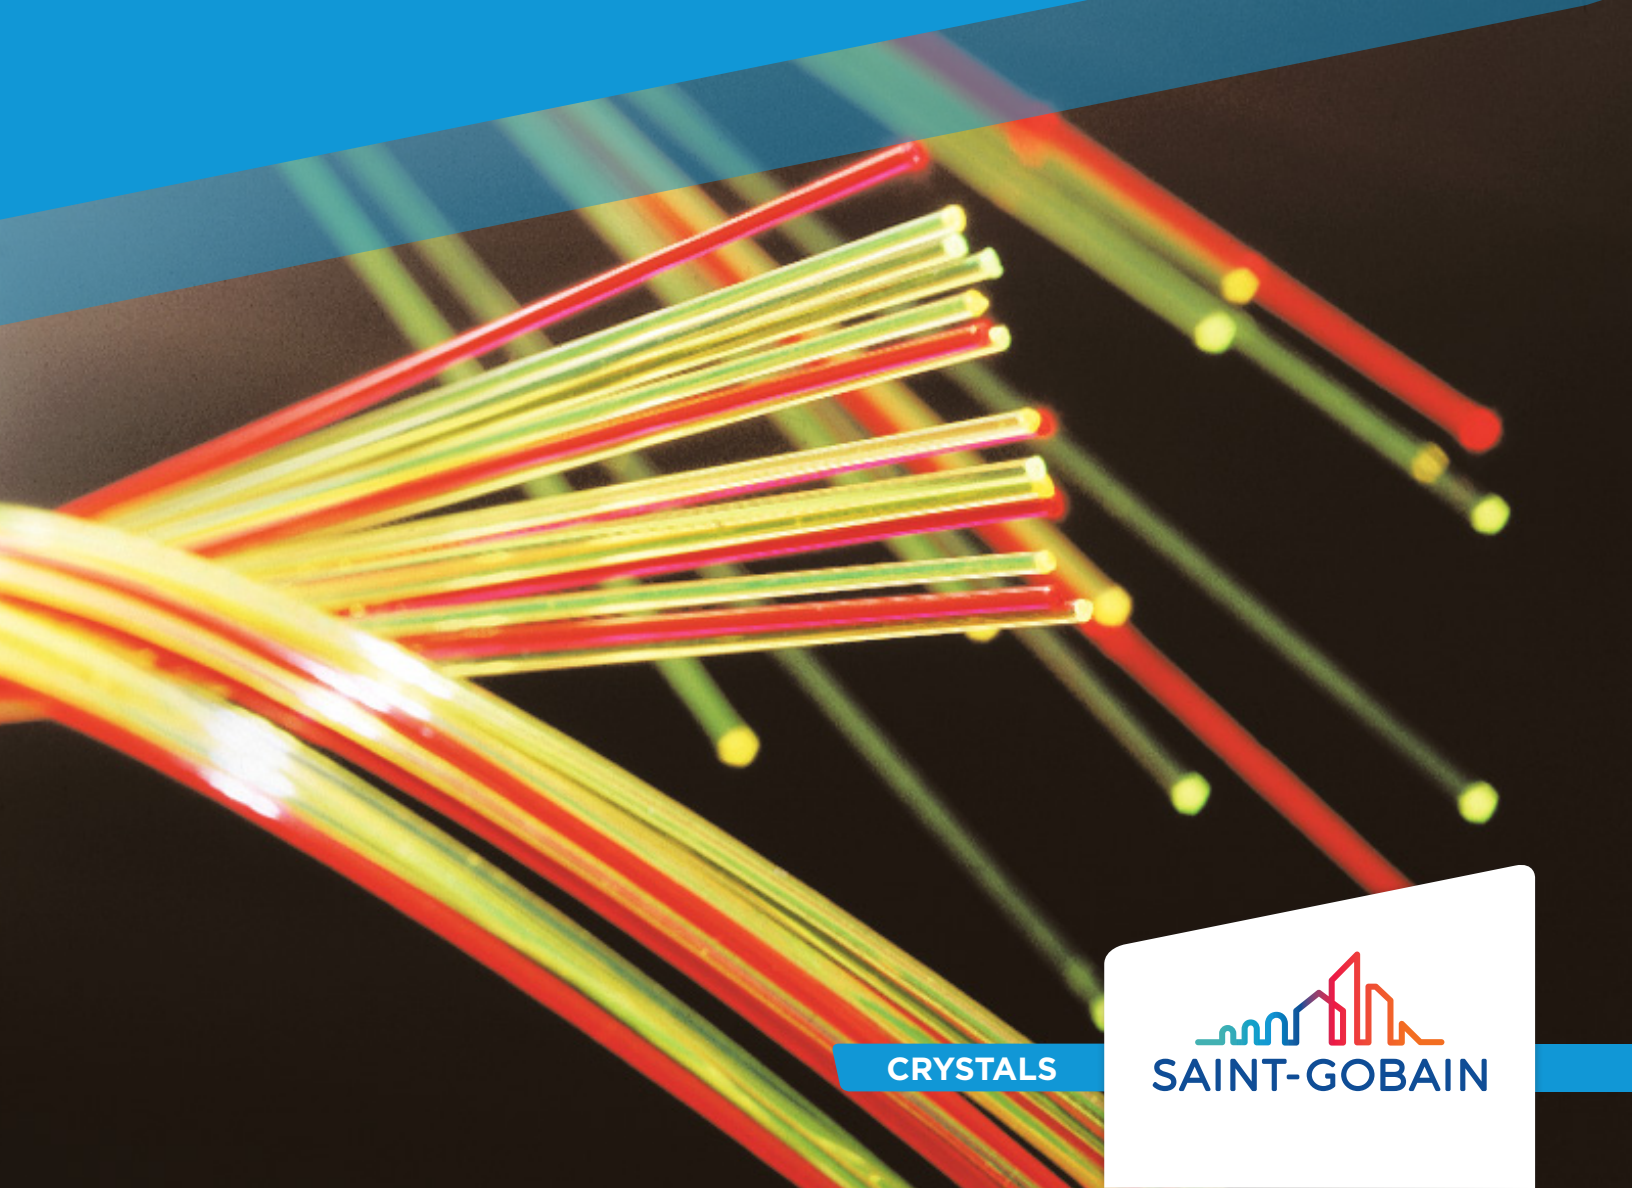

CRYSTALS

  
SAINT-GOBAIN

# About Saint-Gobain Crystals


Saint-Gobain is a global leader in the manufacture and development of engineered materials such as glass, insulation, reinforcements, containers, building materials, ceramics and plastics. The formation of the Crystals Division reflects Saint-Gobain's commitment to the development of high performance materials.

The Crystals division is a combination of companies that have been prominent in crystal growth or radiation detection and measurement, as well as opto-mech products. This Division is comprised of Scintillation & Photonics Products businesses. Notable names in businesses include: Bicron, Crismatec, Harshaw, and NE Technology (inorganic and organic scintillators and detectors); Gamma Laboratories and TGM Detectors (gas-filled radiation detectors); Saphikon (Sapphire products).

Being a part of Saint-Gobain brings us the long-term industrial strategy and investment benefits of such a dynamic group. There is a coherence centered on materials, applied to increasingly diversified needs. Saint-Gobain encourages research and development and the expansion of relevant technologies and their applications. The objective of the group is to take a proven technology forward to meet tomorrow's needs. We continue to make a significant contribution working with OEM customers and researchers to develop detectors for the Energy, Medical, Security, Industrial, Defense & Semiconductor markets to meet new specifications for innovative applications.

This brochure presents the properties and features of our premium plastic scintillators, liquid scintillators, plastic scintillating fibers and related materials. All of our premium plastic scintillators are made of a base of polyvinyltoluene or styrene plus various fluors, which are selected to give each scintillator its characteristic response. Highly purified monomers are the bases for all of our materials, which assures maximum homogeneity and highest quality.

Individual product data sheets are available for each material type. Custom detectors using our plastic or combinations of our plastic and inorganic scintillators are available. We welcome your inquiry for special shapes or custom designs.

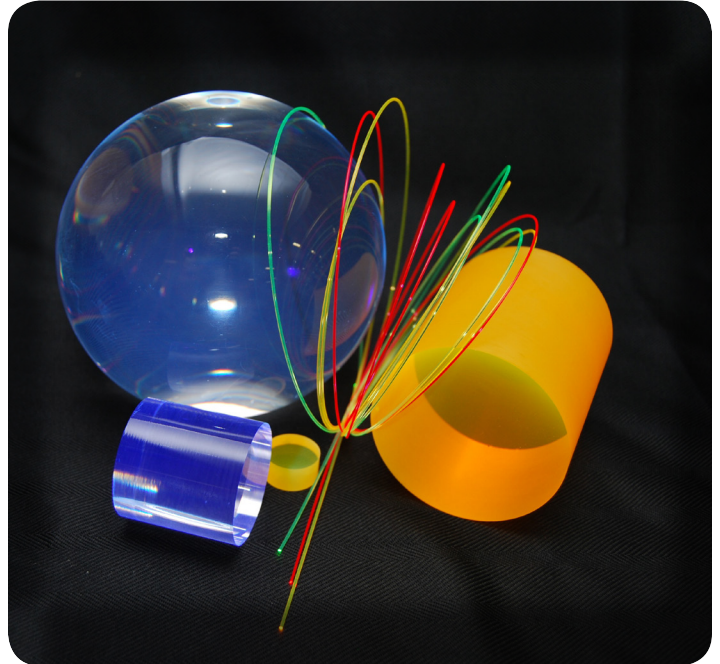

## Saint-Gobain Facts -

Saint-Gobain has a long international history, which began in France in 1665 with the production of the mirrors for the famous Hall of Mirrors in Versailles Palace.

The Saint-Gobain group is now the world leader on habitat and construction markets, providing innovative solutions to save energy and protect the environment.

Today the Saint-Gobain group is among the 100 largest industrial groups worldwide.

## Worldwide Saint-Gobain Crystals locations:

- Bangalore, India
- Beijing, China
- Gieres, France
- Hiram, Ohio
- Milford, New Hampshire
- Newbury, Ohio
- St.-Pierre-les Nemours, France
- Tokyo, Japan

# Plastic Scintillators

## General Description –

The scintillation emission of a typical plastic scintillator has a maximum around 425 nm. Plastic scintillators are characterized by a relatively large light output — typically 25-30% of NaI(Tl) — and a short decay time of around 2 ns. This makes the material suited for fast timing measurements.

All plastic scintillators are sensitive to X-rays, gamma rays, fast neutrons and charged particles.

Special formulations are available for thermal neutron detection or with improved X-ray efficiency. Plastic scintillators are the most popular scintillation material for use in calorimeters, time of flight detectors, nuclear gauging and large area contamination monitors.

The exact emission wavelength and decay time depend on the type of organic activator and on the host material. A large number of different plastic scintillators are available, each for a specific application. General characteristics of plastic scintillators are presented in another section of this brochure.

## Availability –

A plastic scintillator consists of a solid solution of organic scintillating molecules in a polymerized solvent. The ease with which they can be shaped and fabricated makes plastic scintillators an extremely useful form of organic scintillator. Our plastic scintillators are produced in a wide variety of shapes and sizes. Cast sheets are the most commonly used forms.

You also can obtain precision thin sheets, thin film, rods, annuli, ingots and large rectangular blocks.

We supply most solid scintillators with their surfaces prepared to optimize light collection. For cast sheets, the cast surfaces are untouched, and the edges are machined and polished or diamond milled.

Rods, annuli and blocks are machined and polished, or coated with a diffuse reflector paint such as BC-620. Such a reflector is used only when there are few reflections of the scintillation light off the scintillator surfaces before the light reaches the PMT. Most applications require finished surfaces.


You can also obtain scintillators as finished detector assemblies. These incorporate light guides, photomultiplier tubes, special radiation entrance windows, and light tight wrappings (or metal housings).

### Plastic Scintillator Applications Guide

Scintillator	Distinguishing Feature	Principal Applications
BC-400	NE-102 equivalent	general purpose
BC-404	1.8 ns time constant	fast counting
BC-408	best general purpose	TOF counters; large area
BC-412	longest attenuation length	general purpose; large area; long strips
BC-416	lowest cost	“economy” scintillator; large volume
BC-418	1.4 ns time constant	ultra-fast timing; small sizes
BC-420	1.5 ns time constant, low self-absorption	ultra-fast timing; for sheet areas > 100mm <sup>2</sup>
BC-422	1.4 ns time constant	very fast timing; small sizes
BC-422Q	quenched; 0.7 ns time constant	ultra-fast timing, ultra-fast counting
BC-428	green emitter	for photodiodes and CCDs; phoswich detectors
BC-430	red emitter	for silicon photodiodes and red-enhanced PMTs
BC-440	high temperature up to 100°C	general purpose
BC-440M	high temperature up to 150°C	general purpose
BC-444	slow plastic, 285 ns time constant	phoswich detectors for dE/dx studies
BC-444G	285 ns time constant; green emitter	phoswich detectors for dE/dx studies
BC-452	lead loaded (1 or 2%)	x-ray dosimetry (<100 keV ); Mossbauer spectroscopy
BC-490	casting resin scintillator	general purpose
BC-498	applied like paint	beta, gamma detection
<b>Wavelength Shifter Bars</b>		
BC-480	UV to blue waveshifter	Cerenkov detector
BC-482A	green emitter	waveshifter

# Plastic Scintillators

Plastic sheets cast from the monomer ensure the highest light yield and best internal light transmission. All raw materials undergo extensive purification prior to polymerization and the finished sheets exhibit highly uniform scintillation and optical properties. Scintillators are machined to final dimensions using diamond tooling to provide optimum quality surfaces for total internal reflection.

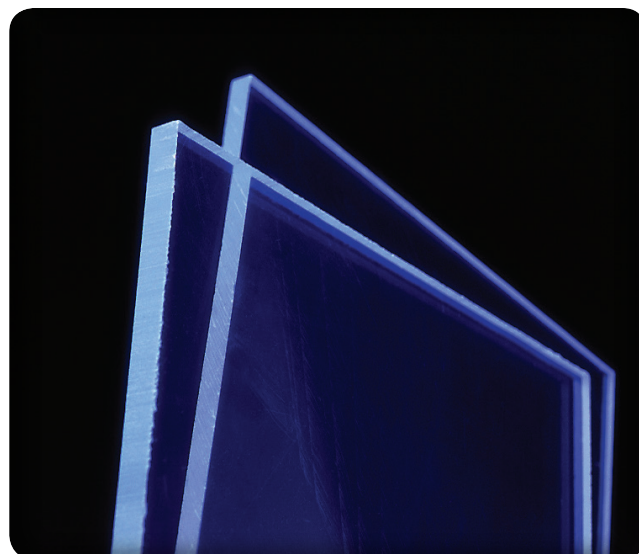

## Standard Cast Sheet Sizes

Thickness*	Thickness Tolerance (nominal)	Routine Maximum**
0.5 mm	± 0.1 mm	30 x 60 cm
1 mm	± 0.1 mm	30 x 60 cm
1.5 mm	± 0.25 mm	30 x 101 cm
2 mm	± 0.25 /- 0.3 mm	45 x 101 cm
3 mm	0.38 mm	63 x 101 cm
5 mm	+ 0.56 / - 0.46 mm	63 x 203 cm
6.4 mm	+ 0.64 / - 0.51 mm	63 x 203 cm
10 mm	± 0.51 mm	63 x 203 cm
12.7 mm	± 0.64 mm	63 x 203 cm
20 mm	± 0.73 mm	63 x 203 cm
25 mm	+ 0.76 / - 1 mm	63 x 203 cm
38 mm	± 0.76 mm	63 x 203 cm
50 mm	± 2 mm	63 x 203 cm
75 mm	± 2.5 mm	60 x 101 cm
100 mm	± 3.8 mm	60 x 101 cm
125 mm	± 6 mm	60 x 101 cm
150 mm	± 6 mm	60 x 101 cm

\* This dimension is controlled during the casting process  
 \*\* Large sizes available, but with different tolerances

## Special Large Cast Sheet

Thickness Range	Maximum Width	Maximum Length
1 - 5 cm	30 cm	500 cm
0.5 - 5 cm	45 cm	400 cm
0.5 - 5 cm	60 cm	300 cm
1 - 2.5 cm	100 cm	200 cm
1 - 3.8 cm	120 cm	120 cm

Please ask about other special sizes you may need

## Thin Films -

Thin films are ideally suited for charged particle detection.

## Thin Film Specifications (Typical Size) BC-400B

Thickness Range	Tolerance Range	Sheet Size W x L
.15 mm	± 10%	150 x 350 mm
.20 mm	± 10%	150 x 350 mm
.25 mm	± 10%	150 x 350 mm

- Edges are trimmed or polished (upon request)

## BC-490 Plastic Scintillator Casting Resin -

BC-490 is a partially polymerized plastic scintillator that can be cured to full hardness by the end user. The scintillator thus formed is clear, with scintillation and mechanical properties similar to those of our general purpose plastic scintillators. It is most frequently used in applications that require other materials to be imbedded in the scintillator and those that require unique shapes to be cast, often in special holders.

BC-490 is supplied in complete kits with detailed instructions. Each kit contains three parts: partially polymerized scintillator resin, catalyst and catalyst solvent.

A green-emitting version, BC-490G, is also available.



# Special Scintillators for Neutrons

Our Zinc Sulfide based plastic scintillators are formulated for the efficient detection of neutrons in the presence of gamma radiation. The chart below compares these specialized detectors to our other neutron detector materials.

## BC-702 Thermal Neutron Detector -

BC-702 is a highly-efficient scintillation detector for thermal neutrons, with excellent gamma background discrimination characteristics. The detector material incorporates a lithium compound matrix dispersed in a fine ZnS(Ag) phosphor powder.

The scintillator disc can be mounted directly to a photomultiplier tube or light guide and surrounded by an appropriate moderator.

## BC-720 Fast Neutron Detector -

BC-720 scintillator is designed specifically for detecting fast neutrons (above 1 MeV) while being insensitive to gamma radiation. It may be coupled directly to a photomultiplier tube or light guide with a variety of optical greases or epoxies.

## BC-704 and BC-705 Thermal Neutron Detector -

The BC-704 detector is a phosphor screen based on ZnS(Ag) and  $^6\text{Li}$  materials having a wavelength of max emission at 450nm.

Absolute scintillation efficiency = approximately 27 eV/photon; each stopped thermal neutron will liberate  $1.75 \times 10^5$  photons; absolute scintillation efficiency = 9%.

Gamma-ray sensitivity: number of gamma photons giving same light output as one neutron = 4,500 for  $^{226}\text{Ra}$ , 1,000 for  $^{137}\text{Cs}$ , 450 for  $^{60}\text{Co}$ .

The composition and properties of BC-705 are the same as those of BC-704, except that the zinc sulfide is activated with copper, i.e., ZnS(Cu). This lengthens the wavelength of maximum emission to 525 nm (green light) which is more suitable for use with some image intensifiers.

Neutron Scintillators Table of Comparison

Scintillator	Type	Decay Time ns	Fast n	Thermal n	Gamma Ray Response	Loading Elements
BC-702	disc	250		x	very small	$^6\text{Li}$
BC-704	rectangular	250		x	very small	$^6\text{Li}$
BC-720	disc	250	x		very small	H
GS-20	glass	various	x	x	small	$^6\text{Li}$
KG2	glass	various	x	x	small	$^6\text{Li}$
BC-400	plastic	2.4	x		yes	H
BC-501A	liquid	3.2	x		yes	H
BC-509	liquid	3.1	x		yes	F
BC-523A	liquid	3.7		x	yes	$^{10}\text{B}$
BC-525	liquid	3.8	x	x	yes	Gd



Pictured are BC-720 discs

Detector Conguration

Scintillator	Sizes	Thickness	Shape	Basic Configuration	Integrated Design
BC-702	38, 50, 76, 127mm	6.35mm	Disc	single disc	Fully integrated with PMT
BC-720	38, 50, 76, 127mm	15.9mm	Disc	single disc	Fully integrated with PMT
BC-705	$\leq 300 \times 300 \text{mm}$	screen	Rectangular	1mm thick aluminum support	Fully integrated with PMT
BC-704	$\leq 300 \times 300 \text{mm}$	screen	Rectangular	1mm thick aluminum support	Fully integrated design *

\*for more information, view Neutron Detection System data sheet on our website [www.detectors.saint-gobain.com](http://www.detectors.saint-gobain.com)

# Optical Plastic Components

Light guides are used to convey scintillation photons to the readout device. Key performance parameters are good optical transmission across a broad range of wavelengths and highly polished surfaces to promote total internal reflection. All light guides are custom designed to suit the particular scintillator geometry and experimental constraints.

## Light Pipes -

Plastic light pipes often are used with plastic and liquid organic scintillators to:

- Provide a PMT mounting surface
- Guide the scintillating light to the photocathode
- Back-off the PMT where the scintillator is in a strong magnetic field
- Minimize pulse height variation

Typical light pipe geometries include:

- Right Cylinders - used when the light pipe diameter is the same as the scintillator diameter
- Tapered Cones - are transition pieces between square-to-round or round-to-round cross-section
- "Fish Tail" - are transition pieces from thin, rectangular cross-sections to round cross-sections
- Adiabatic - provide the most uniform light transmission from the scintillator exit end to the PMT; the cross-sectional areas of the input and PMT faces are equal

We recommend that, for scintillators <6 mm thick, a fish tail light pipe have a groove machined into its edge which joins the scintillator. The scintillator edge fits into the groove to improve the mechanical strength of the joint. Also, a disk which matches the diameter of the PMT is coupled to the light pipe's other end to act as the PMT mounting surface.

The length of a fish tail or adiabatic light pipe is generally equal to the width of the scintillator, for scintillators 15.2 cm wide or greater.

The light pipe materials we use include:

- BC-800 UVT acrylic - for scintillators with emission spectra in the near UV, such as NaI(Tl), BC-418, BC-420 and BC-422
- BC-802 general purpose, non-UVT, PMMA plastic - for most scintillators



## Wavelength Shifter Bars -


Wavelength shifter (WLS) plastic bars absorb light at one wavelength and emit it isotropically at a longer wavelength. A portion of the re-emitted light is transmitted by total internal reflection along the WLS bar to be read out at the ends.

Often used with scintillator shower stacks, single WLS bars are air-coupled to a stack or plane of scintillator strips. The scintillation light is essentially turned 90° in a very compact structure. However, there is a typical 75% loss of signal amplitude in such a system.

We make wavelength shifter bars from PMMA- and PVT-based materials. These include:

- BC-480 - shifts from near UV (300-360 nm) to 425 nm
- BC-482A - shifts from 420 to 500 nm; for use with BC-408 and BC-412 plastic scintillators
- BC-484 - shifts from 380 to 435 nm; for use with BC-414 plastic scintillator

We also supply WLS optical fibers.

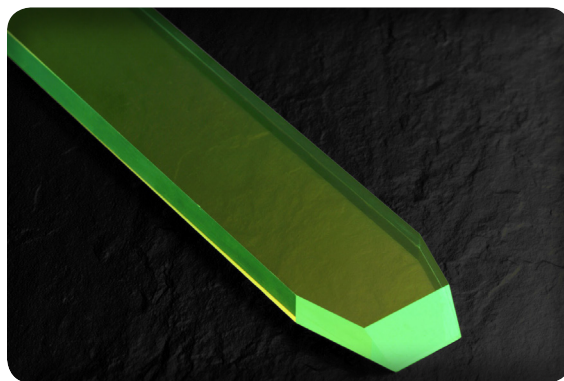

# Plastic Scintillating Fibers

We produce a variety of plastic scintillating, wavelength-shifting and light-transmitting fibers. They are available in bulk quantities wound on spools (smaller cross-sections) and as canes (pre-cut straight lengths), or assembled into stacked arrays, bundles, ribbons and complete detectors.

Current sizes range from 0.25 mm to 5 mm square or round cross-sections.

The flexibility of fibers allows them to conform to surface shapes, yielding geometries superior to those of other types of detectors. Examples are detectors for monitoring pipes or barrels.

For more information, access our Scintillating Fibers brochure on our website - [www.crystals.saint-gobain.com](http://www.crystals.saint-gobain.com)


## Specific Properties of Standard Formulations

Fiber	Emission Color	Emission Peak, nm	Decay Time, ns	# of Photons per MeV**	Characteristics / Applications
BCF-10	blue	432	2.7	~8000	General purpose; optimized for diameters >250µm
BCF-12	blue	435	3.2	~8000	Improved transmission for use in long lengths
BCF-20	green	492	2.7	~8000	Fast green scintillator
BCF-60	green	530	7	~7100	3HF formulation for increased hardness
BCF-91A	green	494	12	n/a	Shifts blue to green
BCF-92	green	492	2.7	n/a	Fast blue to green shifter
BCF-98	n/a	n/a	n/a	n/a	Clear waveguide

\*\* For Minimum Ionizing Particle (MIP), corrected for PMT sensitivity

Our typical fiber has a PMMA cladding. The core contains a combination of fluorescent dopants selected to produce the desired scintillation, optical and radiation-resistance characteristics.

## A Typical Round Scintillating Fiber

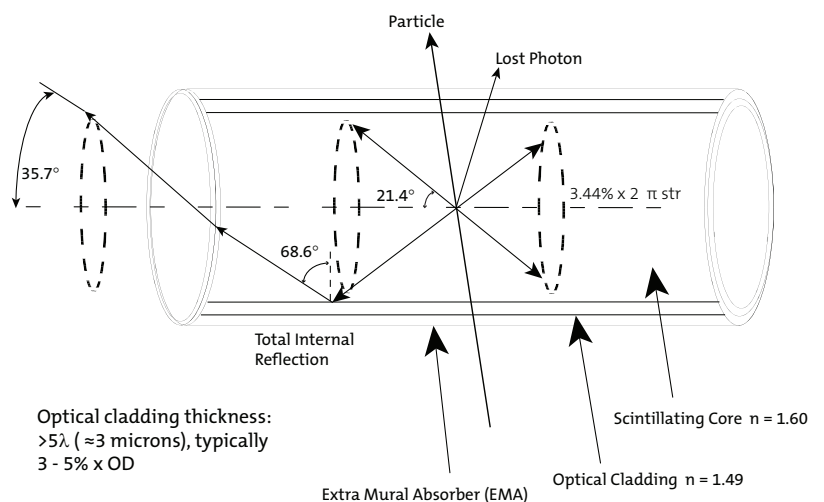

## Common Properties of Single-clad Fibers -

Core material	Polystyrene
Core refractive index	1.60
Density	1.05
Cladding material	Acrylic
Cladding refractive index	1.49
Cladding thickness, round fibers	3% of fiber diameter
Cladding thickness, square fibers	4% of fiber size
No. of H atoms per cc (core)	$4.82 \times 10^{22}$
No. of C atoms per cc (core)	$4.85 \times 10^{22}$
No. of electrons per cc (core)	$3.4 \times 10^{23}$
Operating temperature	-20°C to +50°C
Vacuum compatible	Yes

## Common Properties of Multi-clad Fibers -


Second cladding material	Fluor-acrylic
Refractive index	1.42
Thickness, round fibers	1% of fiber diameter
Thickness, square fibers	2% of fiber size
Numerical aperture	0.74
Trapping efficiency, round fibers	5.6% minimum
Trapping efficiency, square fibers	7.3%

# Liquid Scintillators

Liquid scintillators have many applications in neutron and gamma detection. They also provide low-cost alternatives to other scintillators in applications where large volumes are required.

Different base materials produce Pulse Shape Discrimination properties, high flash point, performance at low or high temperatures, or other properties. Some scintillators are loaded with organo-metallic compounds to increase their neutron or photon cross-sections. Certain formulations are designed to be economical in large volumes. Liquid scintillator concentrates designed to be diluted on site are available.

Liquid scintillators should be sealed in clean, dry, chemically inert containers. Prior to use, they are deoxygenated to assure that the scintillators achieve their optimum performance.

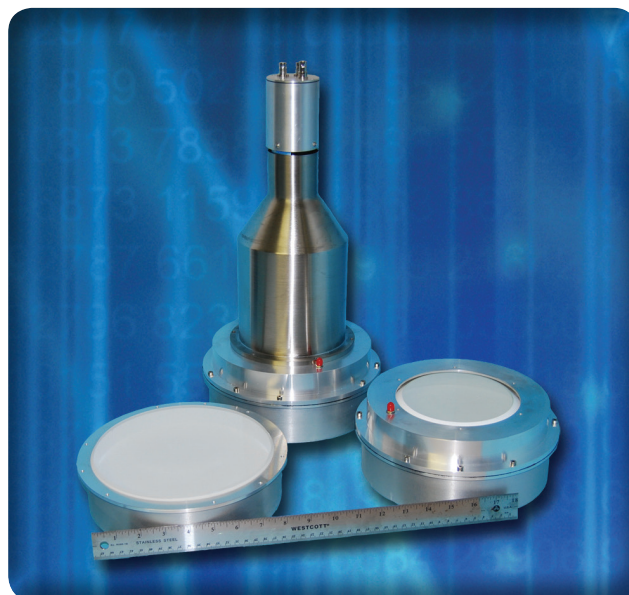

## Liquid Scintillators Application Guide

Scintillator	Distinguishing Features	Principal Applications
BC-501A	excellent pulse shape discrimination properties	$\gamma$ >100 keV, fast n spectrometry
BC-505	highest light output, transmission; high flash point	$\gamma$ , fast n for large volume detectors
BC-509	negligible hydrogen content; neutron insensitive	$\gamma$ , fast n
<i>BC-517 and 519 series are mineral oil based for large tanks<sup>1</sup> and acrylic containers scintillators</i>		
BC-517L	standard formulation	$\gamma$ , fast n, cosmic, charged particles
BC-517H	high light output standard formulation	$\gamma$ , fast n, cosmic, charged particles
BC-517P	lowest cost, highest H content, high light transmission, chemical inertness, highest flash point	$\gamma$ , fast n, cosmic, charged particles
BC-517S	highest light output of mineral oil based scintillators	$\gamma$ , fast n, cosmic, charged particles
BC-519	pulse shape discrimination properties	$\gamma$ , fast n; n- $\gamma$ discrimination
BC-521	Gd loaded	neutron spectrometry, neutrino research
BC-523A*	<sup>10</sup> B loaded; pulse shape discrimination properties	total absorption neutron spectrometry
BC-525	Gd loaded; mineral oil base	neutron spectrometry, neutrino research, for large acrylic tanks
BC-531	high H content; high light output; high flash point; moderate cost, for plastic tanks	fast n, cosmic
BC-533	for low temperatures, high flash point, low cost large volume detectors	$\gamma$ , fast n, cosmic
BC-537	deuterated benzene base	fast n; pulse shape discrimination

<sup>1</sup>Large tank = volume >40 liters

\*Natural boron loaded scintillator = BC-523



# Liquid Scintillator

## Bicrocells


Our liquid scintillators are available sealed within Bicrocells. Bicrocells are containers, usually made of glass or aluminum, with at least one ground-and-polished port available for viewing by a PMT. The scintillators are deoxygenated for improved stability and light output; and, the Bicrocells have expansion reservoirs containing oxygen-free nitrogen to maintain this condition.

Unless otherwise instructed, glass Bicrocells will be coated with a diffuse white reflector. Non-glass Bicrocells will have an internal white reflector. The reflector and construction materials are selected for long-term compatibility. Aluminum Bicrocells have a clear-anodized surface treatment.

For applicable scintillators, we provide neutron source and pulse shape discrimination test measurements.

Other geometric shapes are available, including regular and tapered hexes.

### Model MAB-1FBC-501A/2L-X cell

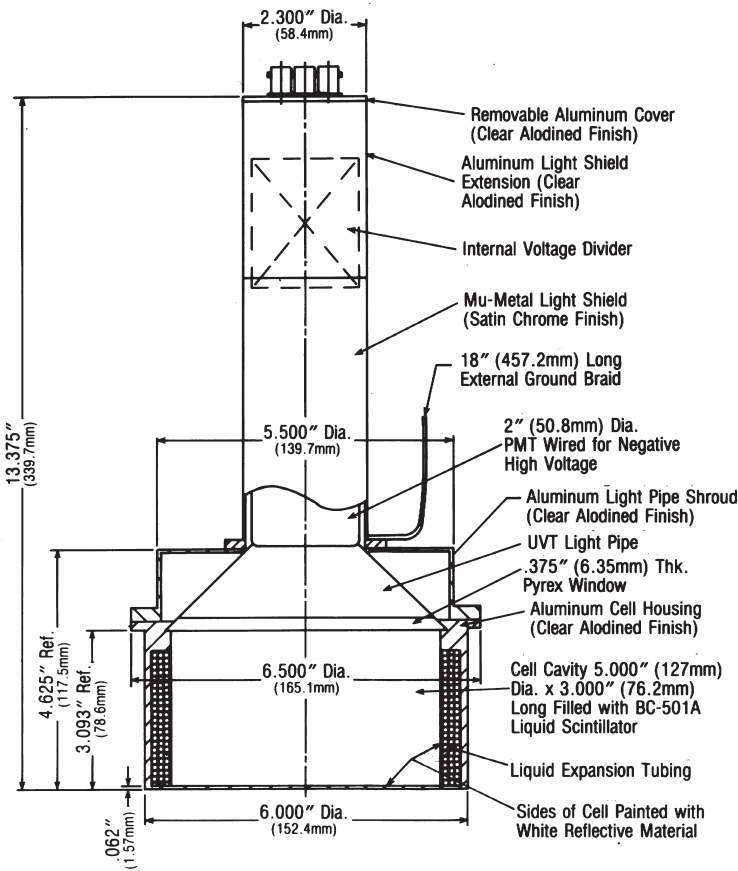

### Other Configurations -


Cells can be assembled with a demountable PMT; and other non-standard designs are possible. Glass scintillators may be added to produce composite configurations. Ruggedized designs are also available.

We can also produce cells made of acrylic in various shapes and sizes (usually for large-area detectors). The expansion reservoir and any light guides or PMTs are mounted to exterior surfaces of these cells.

Housing Material	Cell Model	Description
Glass	VB-1	Vertical orientation one PMT
	HB-1, 2	Horizontal orientation only; one viewing
	TPB-1, 2	Horizontal or vertical orientation only; one or two PMT
Aluminum	MVB-1	Vertical orientation only; one PMT viewing port
	MAB-1F	Any orientation; one PMT viewing port; mounting flange
	MAB-2F	Any orientation; two PMT viewing ports; mounting flange
	MTP-1	Horizontal or vertical orientation; one PMT viewing port

### Vertical cell Model VB-1

For vertical viewing, all glass, one port, gas reservoir at top, reflector on all surfaces except viewing port.

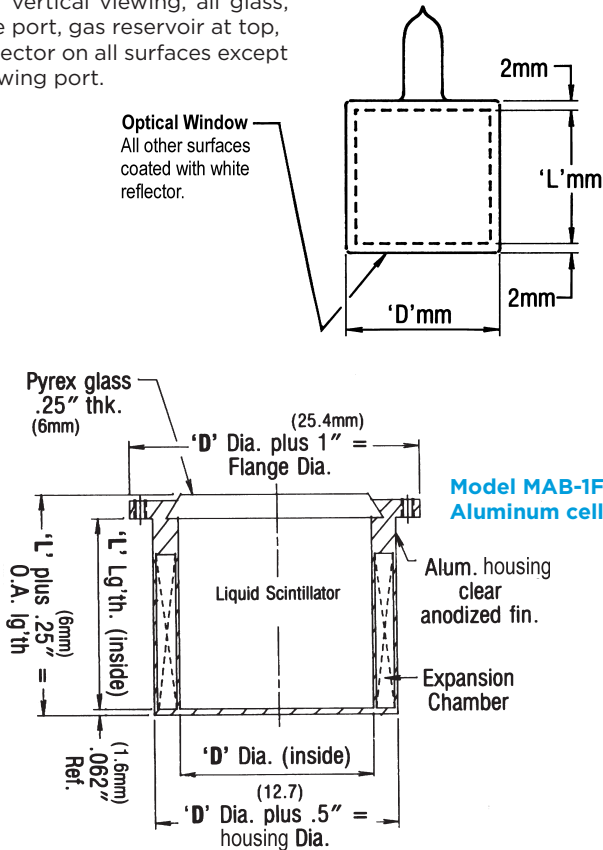

Model MAB-1F Aluminum cell

# Detector Assembly Material

## Optical Interface and Wrapping Materials, Reflector Paints

**BC-600 optical cement** is a clear epoxy resin which sets at room temperature and has a refractive index close to that of our premium plastic scintillators. It is therefore ideal for optically cementing these scintillators to light pipes or optical windows. It is not recommended for coupling scintillators to photomultiplier tubes. For that application we recommend BC-630.

**BC-630 Silicone Optical Grease** is a clear, colorless, silicone, optical coupling compound which features excellent light transmission and low evaporation and bleed at 25°C. It has a specific gravity of 1.06 and an Index of Refraction of 1.465.

We supply this single-component formulation in 60 ml jars or in 500 ml quantities.

**BC-634A Optical Interface** is an optical interface material which gives you a consistent, reproducible, optical coupling between scintillators and PMTs. It is formulated for use within the temperature range of -10°C to +60°C.

We supply BC-634 as ready-to-use, flexible disks in specified diameters and in thicknesses of 3 and 6 mm. The standard formulation is just hard enough to keep you from tearing the interface while handling it.

**BC-637 Optical Coupling** is a silicone-adhesive, coupling compound formulated specifically for making optically clear bonds between scintillators and photomultiplier tubes (or between non-scintillating light pipes and photomultiplier tubes). We designed it to provide a reliable interface between these components in high temperature applications.

It comes as precast pads and is formulated for temperatures up to 200°C.

**BC-638 Black Wrapping Tape** is black adhesive tape 50.8 mm wide by .2 mm thick. Wrapping a plastic scintillator in one layer will give you a light-tight seal. We provide BC-638 in 32.9 m rolls.

**BC-640 Plastic Masking Paper** is an adhesive-backed, masking paper routinely used for protecting the surfaces of plastic scintillator during handling or storage.

We supply BC-640 in rolls 30.4 cm wide x 182.9 m long.

**BC-642 PTFE Reflector Tape** is a 0.08 mm thick (nominal) Teflon® tape, frequently used as a reflecting material for non-hygroscopic scintillators. Three layers give optimum reflectivity.

It comes in rolls 50.8 mm wide x 13.7 m long.

**BC-620 Reflector Paint for Plastic Scintillators** is a highly efficient reflector employing a special grade of titanium dioxide in a water soluble binder. It is applied directly onto plastic scintillators, acrylic light guides, glass and metals. It is not intended for direct contact with liquid scintillators (for this application, use BC-622A). It is a diffuse reflector and, therefore, should not be applied to sheets of scintillator or light guide material where the length is much longer than the thickness.

It is recommended mainly for all scintillators having emission spectra about 400 nm.

BC-620 is normally supplied in 1 liter containers.

**BC-622A Reflector Paint for** is intended for use with liquid scintillators and is particularly useful in large, steel or aluminum tanks which require application of the paint at the research site. It is a diffuse reflector and, therefore, should not be used on the major surfaces of long, narrow tanks (total internal reflection should be employed in these).

BC-622A is ideal for use with the benzene based BC-537 liquid scintillators.

BC-622A reflector normally comes in 500 ml and 1 liter quantities. The paint resin and hardener are supplied in separate containers.



BC-600



BC-630




BC-634



BC-620

# Technical Data

## General Characteristics

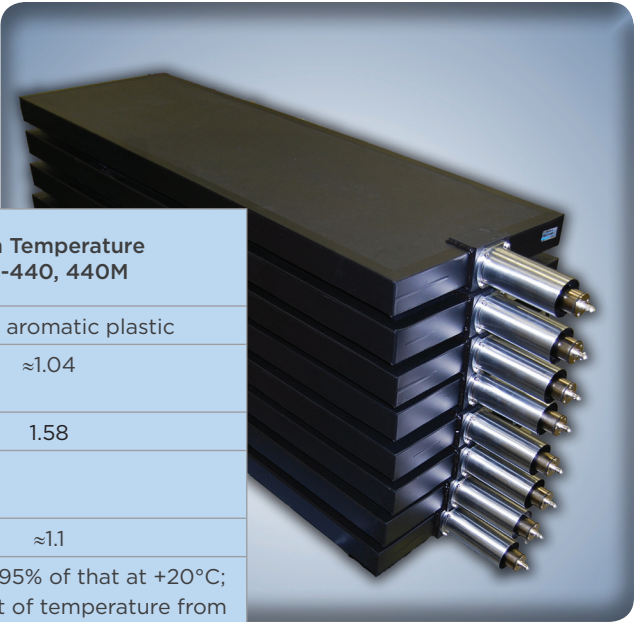


Scintillators	General Purpose BC-400, 404, 408, 412, 416, 418, 420, 422, 430,444,	High Temperature BC-440, 440M
Base	Polyvinyltoluene	Special aromatic plastic
Density	1.03	≈1.04
Refractive Index	1.58	1.58
Coefficient of Linear Expansion	7.8 x 10 <sup>-5</sup> /°C, below 67°C	
Atomic Ratio, H/C	≈1.1	≈1.1
Light Output	At +60°C = 95% of that at +20°C; independent of temperature from -60°C to +20°	At +60°C = 95% of that at +20°C; independent of temperature from -60°C to +20°C. At 150°C, light output is 84% of that at room temperature (BC-438)
Vapor Pressure	May be used in vacuum	
Solubility	Soluble in aromatic solvents, chlorine, acetone, etc; insoluble in water, dilute acids, lower alcohols, silicone fluid, grease and alkalis.	

Structural Properties of BC-408 Premium Plastic Scintillator (Characteristic of all of our PVT-base Scintillator Materials)

Property	Test Procedure	Thickness	
		50 mm	150 mm
Yield Strength MPa	ASTM D638	30.8	28.3
Breaking Strength MPa	ASTM D638	30.8	28.3
Tensile Modulus MPa	ASTM D638	2700	3010
Flexural Strength MPa	ASTM D790	45.6	40.5
Flexural Modulus MPa	ASTM D790	2920	2700
Compressive Strength MPa	ASTM D695	38.1	40.5
Compressive Molulus MPa	ASTM D695	1380	2700
Shore "D" Hardness	ASTM D2240	84	84

1 MPa (megapascal) = 145 psi = 10<sup>6</sup> Nt/m<sup>2</sup>


Response of BC-400  
Scintillation Light Produced vs. Particle Energy

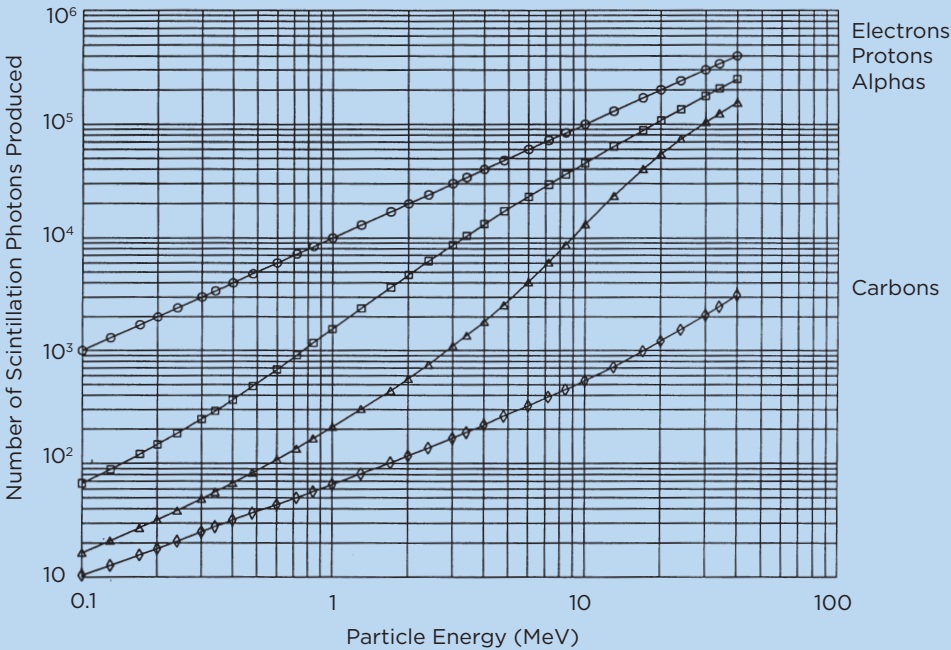


# Technical Data

## Light Output, Light Collection


Range of Atomic Particles in  
Premium Plastic Scintillator

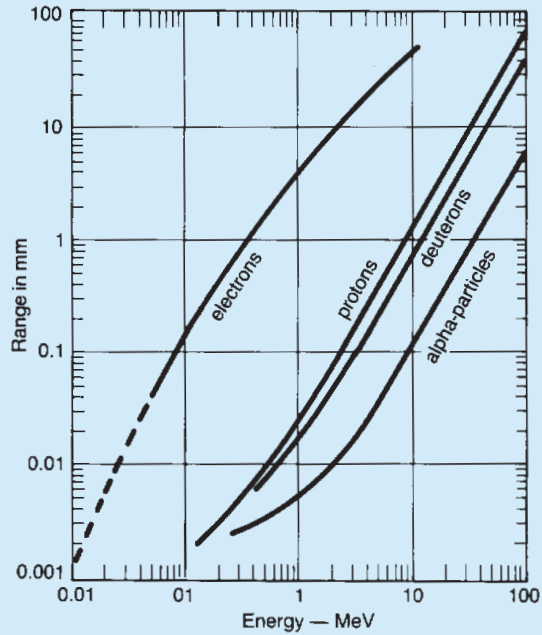

Premium Plastic Scintillator  
Response to Atomic Particles

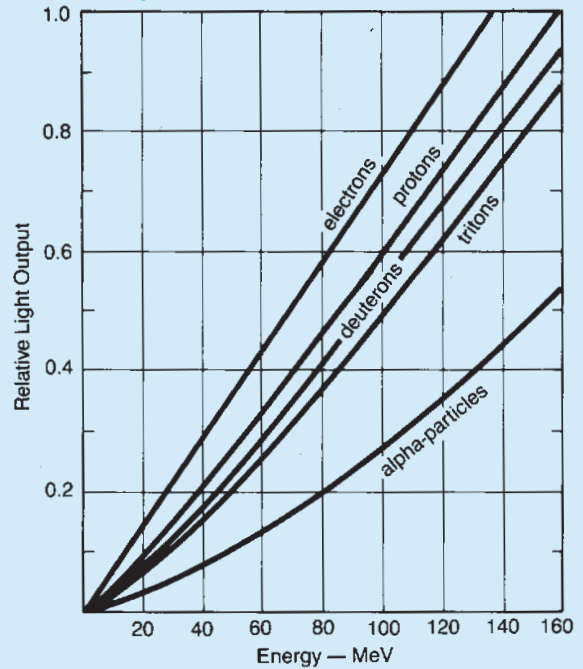

Light Collection in BC-412 Cast Sheet

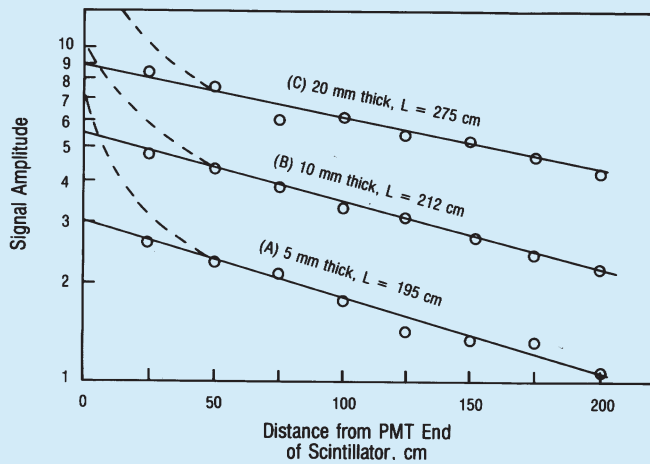

Sheet Size: 120 mm x 2000 mm  
(4.71" x 80")

- Plot of Technical Attenuation Length using a 150 mm (6") long, triangular light guide connecting the scintillator to the phototube.
- Approximate result when the phototube is coupled directly to the scintillator.



# Technical Data

## Light Attenuation Coefficients

### Light Attenuation Lengths for Plastic Scintillators

The Technical Light Attenuation Length (TAL) of a plastic scintillator is defined as the length required to reduce the signal amplitude by 1/e. It is applied to scintillator sheets and rods having lengths of a meter or more, and where total internal reflection is a major factor in the light collection process.

These factors contribute to attenuation length for a given scintillator sheet:

- Bulk transmission of the material
- Thickness and shape
- Reflective properties of the surfaces

The use of light guides and reflectors also can alter the measured attenuation length of a plastic scintillator counter assembly. The effect of thickness on the measured TAL is demonstrated by the following data on 12 cm wide x 200 cm long sheets of BC-408:

5 mm thick TAL = 190 cm  
10 mm thick TAL = 210 cm  
20 mm thick TAL = 275 cm

This data was taken using a 50 mm diameter, bialkali photomultiplier tube coupled to one end of the scintillator by a light guide and with the opposite end of the scintillator blackened. In actual practice, however, the far end is not blackened. This results in much better light collection performance.

The following are typical bulk attenuation lengths for our premium plastic scintillators used in long sheets:

BC-400	250 cm
BC-404	160 cm
BC-408	380 cm
BC-412	400 cm
BC-416	400 cm
BC-420	110 cm
BC-440	400 cm

### Gamma Attenuation Coefficients for Plastic Scintillators

keV	$\mu_1(\text{cm}^{-1})$	keV	$\mu_1(\text{cm}^{-1})$
10	1.90	360	0.112
12	1.23	380	0.110
14	0.780	400	0.107
16	0.620	420	0.105
18	0.490	440	0.103
20	0.400	460	0.102
25	0.290	480	0.100
30	0.250	500	0.0980
35	0.230	550	0.0941
40	0.215	600	0.0907
45	0.200	650	0.0874
50	0.196	700	0.0845
55	0.189	750	0.0822
60	0.186	800	0.0800
65	0.183	850	0.0777
70	0.180	900	0.0754
75	0.178	950	0.0734
80	0.176	1000	0.0715
85	0.174	1200	0.0658
90	0.172	1400	0.0606
100	0.167	1600	0.0561
120	0.160	1800	0.0522
140	0.154	2000	0.0494
160	0.149	2200	0.0465
180	0.143	2400	0.0437
200	0.138	2600	0.0414
220	0.134	2800	0.0394
240	0.130	3000	0.0378
260	0.126	3200	0.0363
280	0.123	3400	0.0352
300	0.121	3600	0.0335
320	0.118	3800	0.0323
340	0.115	4000	0.0312


### Linear Attenuation Coefficients for Neutron Capture Scintillator BC-454 (1% $^{10}\text{B}$ ) \*

Neutron Energy	Cross Section Barns/Atom	Linear Attenuation Coefficient ( $\text{cm}^{-1}$ )
0.025 eV	3836.00	2.15
0.1 eV	1929.00	1.08
1.0 eV	610.00	0.34
10 eV	193.00	0.11
100 eV	60.60	0.034
1 keV	19.00	0.011
10 keV	5.89	0.0033
20 keV	4.17	0.0023
30 keV	3.41	0.0019
40 keV	2.98	0.0017
50 keV	2.68	0.0015
100 keV	1.96	0.0011
120 keV	1.80	0.0010
150 keV	1.61	0.00090
200 keV	1.36	0.00076
225 keV	1.28	0.00072
250 keV	1.19	0.00067

\* $5.6 \times 10^{20}$  Atoms/ $\text{cm}^3$   $^{10}\text{B}$

### Gamma Attenuation Coefficients ( $\mu$ ) for BC-452 (5% Pb) and BC-400 (unloaded) Premium Plastic Scintillators

Energy (keV)	5% BC-452 ( $\text{cm}^{-1}$ )	BC-400 ( $\text{cm}^{-1}$ )
20	4.91	0.400
30	1.78	0.250
40	0.919	0.215
50	0.587	0.196
60	0.427	0.186
80	0.272	0.176
100	0.449	0.167
150	0.251	0.151
200	0.188	0.138

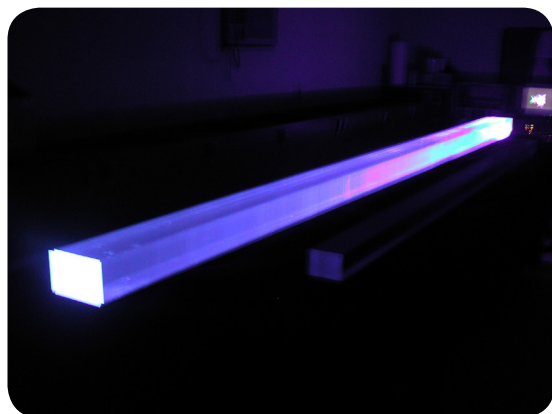

### Physical Constants of Saint-Gobain Crystals Plastic Scintillators

Scintillator	Light Output % Anthracene <sup>1</sup>	Wavelength of Maximum Emission, nm	Decay Constant, ns	Bulk Light Attenuation Length, cm	Refractive Index	H:C Ratio	Loading Element % by weight	Density	Softening Point °C
BC-400	65	423	2.4	250	1.58	1.103		1.032	70
BC-404	68	408	1.8	160	1.58	1.107		1.032	70
BC-408	64	425	2.1	380	1.58	1.104		1.032	70
BC-412	60	434	3.3	400	1.58	1.104		1.032	70
BC-416	38	434	4.0	400	1.58	1.110		1.032	70
BC-418	67	391	1.4	100	1.58	1.100		1.032	70
BC-420	64	391	1.5	110	1.58	1.102		1.032	70
BC-422	55	370	1.6	8	1.58	1.102		1.032	70
BC-422Q	11	370	0.7	<8	1.58	1.102	Benzephenone,0.5%*	1.032	70
BC-428	36	480	12.5	150	1.58	1.103		1.032	70
BC-430	45	580	16.8	NA	1.58	1.108		1.032	70
BC-440	60	434	3.3	400	1.58	1.104		1.032	99
BC-440M	60	434	3.3	380	1.58	1.104		1.039	100
BC-444	41	428	285	180	1.58	1.109		1.032	70
BC-452	48	424	2.1	150	1.58	1.134	Lead,2%	1.050	60
BC-480	**	425	-	400	1.58	1.100		1.032	70
BC-482A	QE=.86	494	12.0	300	1.58	1.110		1.032	70
BC-490	55	425	2.3	NA	1.58	1.107		1.032	70
BC-498	65	423	2.4	NA	1.58	1.103		1.032	70

<sup>1</sup> Anthracene light output = 40-50% of NaI(Tl) \* 0.1 to 5 weight % also available \*\* Ratio of Cerenkov light to scintillator light = 10:1

### Physical Constants of Saint-Gobain Crystals Liquid Scintillators

Scintillator	Light Output % Anthracene <sup>1</sup>	Wavelength of Maximum Emission, nm	Decay Constant, ns	H:C Ratio	Loading Element	Density	Flash Point °C
BC-501A	78	425	3.2 <sup>1</sup>	1.212		0.87	26
BC-505	80	425	2.5	1.331		0.877	48
BC-509	20	425	3.1	.0035	F	1.61	10
BC-517L	39	425	2	2.01		0.86	102
BC-517H	52	425	2	1.89		0.86	81
BC-517P	28	425	2.2	2.05		0.85	115
BC-517S	66	425	2	1.70		0.87	53
BC-519	60	425	4	1.73		0.87	63
BC-521	60	425	4	1.31	Gd (to 1%)	0.89	44
BC-523	65	425	3.7	1.74	Nat. <sup>10</sup> B (5%)	0.916	-8
BC-523A	65	425	3.7	1.67	Enr. <sup>10</sup> B (5%)	0.916	-8
BC-525	55	425	3.8	1.56	Gd (to 1%)	0.88	91
BC-531	59	425	3.5	1.63		0.87	93
BC-533	51	425	3	1.96		0.80	65
BC-537	61	425	2.8	0.99 (D:C)	<sup>2</sup> H	0.954	-11

\* Anthracene light output = 40-50% of NaI(Tl) <sup>1</sup> Fast component; mean decay times of first 3 components = 3.16, 32.3 and 270 ns

The data presented are believed to be correct but are not guaranteed to be so. Nothing herein shall be construed as suggesting the use of our product in violation of any laws, regulations, or rights of third parties. User should evaluate suitability and safety of product for user's application. We cannot assume liability for results that user obtains with our products since conditions of use are not under our control.

# Handling, Care and Safety

**Premium plastic scintillators** are shipped with a protective masking paper, or, on request, with a clear plastic film applied to the scintillator surfaces. This protective layer should be left on the scintillator during all handling until just before it is wrapped with reflective light tight covers prior to installation in your detector system.

These protective materials adhere to the scintillator by means of a low-tack adhesive which leaves little or no residue when the mask is removed. The adhesive is sufficiently weak so that, once it is removed, the masking tape will not stick to the scintillator again.

The scintillators and light guides are machined without the use of standard cutting oils. Water is usually the only lubricant employed. After being polished, the scintillators and light guides are cleaned thoroughly to remove all residues of polishing compounds and optical cements.

1. Keep the factory-applied, protective masking material on the scintillator as long as possible. Avoid wetting the protective paper as this may cause the paper to come off and leave the adhesive attached to the scintillator.
2. When handling bare scintillator, wear clean soft cotton gloves. If this is not possible, wash your hands to remove any oils. The normal body oils could damage the scintillator.
3. Protect the scintillator from exposure to most organic solvents and their vapors. The one exception to this rule is the lower alcohols: methanol, ethanol and isopropanol. Use only reagent grade alcohols. Isopropanol is preferred because of the less intense cooling that accompanies evaporation.
4. Clean water and soapy water followed by a clean rinse are the best solvents for cleaning the scintillator, especially when cleaning large areas. A solution of about 10 grams of Alconox in a gallon of water is recommended. After water washing, the scintillator may be blown dry with oil-free compressed air or gently patted dry with clean, soft, non-abrasive cloths or paper towels.

Alcohols are best employed to clean areas such as around epoxy joints.

## Scintillating Fiber

### Handling

When handling bare scintillator, wear clean soft cotton gloves. If this is not possible, wash your hands to remove any oils. The normal body oils of some people can damage the scintillator.

### Cleaning

Clean only with water or Isopropyl alcohol.

### Hand Polishing

To polish ends start with #600 grit sandpaper followed by #800 then #1200 and finally plain white printer paper.

**Liquid scintillators**, if handled correctly, can have unlimited lifetimes of high quality performance. In general, liquid scintillators should be stored away from strong light, preferably in darkness. The liquids are flammable and should be kept away from any source of fire.

Small quantities of liquid scintillator are shipped in glass bottles under nitrogen; and, to ensure a long shelf life, should be stored under nitrogen or other inert gas.

Larger quantities of scintillator are shipped in selected and cleaned steel 5-gallon and 55-gallon containers, which should be kept not to exceed 90°F.

The basic rule to keep in mind when using liquid scintillators is that contamination must be avoided.

### Air -

Liquid scintillators perform best when free of dissolved atmospheric oxygen. Dissolved oxygen reduces the light output by about 30% from the optimum. It always destroys any pulse shape discrimination properties that the liquid might possess.

The scintillator is deoxygenated easily by slowly bubbling finely dispersed, dry nitrogen gas through it. An atmosphere of pure nitrogen should be maintained above the liquid in its closed container. You also can use inert gases such as argon for this activity.

For liquids having pulse shape discrimination properties, such as BC-501A, you must exercise special care to avoid exposing the scintillator to oxygen after the deoxygenation process. BC-501A usually is used in small quantities (less than 2 liters) which require 20-60 minutes of nitrogen bubbling before the container is sealed. You also can deoxygenate small volumes of liquid scintillator by freeze pumping.

### Safety -

Reference the Material Safety Data Sheet included with your scintillator shipment for specific instructions.

In general:

1. WEAR PROTECTIVE GLOVES
2. VENT ROOM
3. EXTINGUISH ALL FLAMES

Saint-Gobain Crystals operates a Quality Management System for design and manufacturing of chemical compounds, crystals, and detectors, which complies with the requirements of ISO 9001:2008

For additional product literature or information, call customer service at any of our locations or access our website document library – [www.crystals.saint-gobain.com](http://www.crystals.saint-gobain.com).

Other radiation detection products available from Saint-Gobain Crystals include:

- Inorganic scintillators including NaI(Tl), BGO, CsI, CdWO<sub>4</sub>, BrillanCe™350 (LaCl<sub>3</sub>) and BrillanCe™380 (LaBr<sub>3</sub>) crystals and PreLude™420 (LYSO) scintillator – configured as solids or arrays with or without an integrated light-sensing device.
- Geiger-Mueller and <sup>3</sup>He proportional counters.

*It's* **|** *what's*  
**Inside**  
*that* **Counts**®



**Saint-Gobain Crystals**

[www.crystals.saint-gobain.com](http://www.crystals.saint-gobain.com)

The data presented in this brochure are believed to be correct but are not guaranteed to be so. Nothing herein shall be construed as suggesting the use of our product in violation of any laws, regulations, or rights of third parties. User should evaluate suitability and safety of product for user's application. We cannot assume liability for results that user obtains with our products since conditions of use are not under our control.

BrillanCe, PreLude and "It's what's Inside that Counts" are trademarks of Saint-Gobain Ceramics & Plastics, Inc.

©2001-17 Saint-Gobain Ceramics & Plastics, Inc. All rights reserved.

(10-17)